













6meter combined pole install Instruction

	lightning rod ① 1pc	plastic plug ② 2pcs	bullet camera bracket ③ 1pc	PTZ camera bracket ④ 1pc	top pole ⑤ 1pc	extension pole ⑥ 2pcs	turning part ⑦ 1pc	lock nut ⑧ 1pc	base pole ⑨ 1pc
Accessories									
			optional						

1

2

3

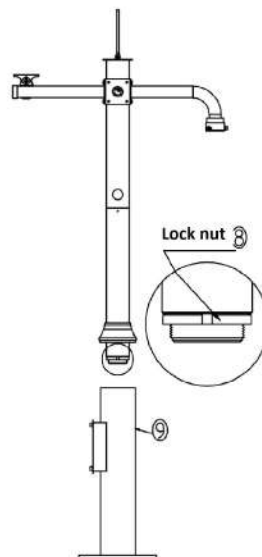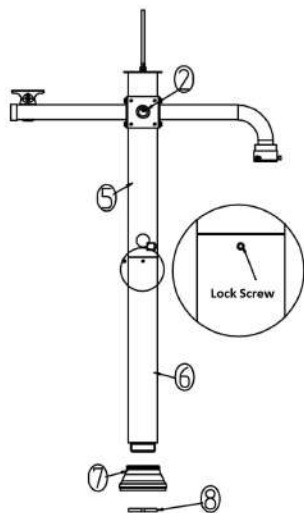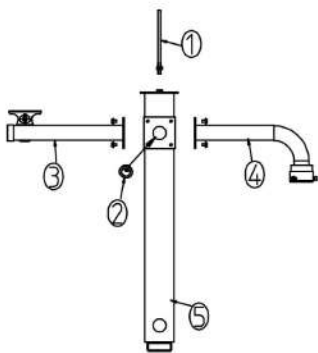

Install PTZ bracket and bullet bracket onto any 2 directions on the top pole, and seal other 2 directions not using with plastic plugs. Install the lightning rod on the top

Assembly the top pole and extension pole, tight the lock screw on the extension pole after assembly. Install the lock nut and turning part at the bottom of extension pole

Assembly the extension pole onto base pole, tight the lock nut